ELEPHANTS IMP BIZKIT TRIBUTE TECHNICAL RIDER

Artist (or Group) Name:	Disco Elephants
Sound Engineer:	:
Monitor Engineer:	:
Light Engineer:	<u>-</u>

Chanel	Instument	Mic		
1	Kick	Bets 52 / Audix D6		
2	Kick	Beta 91		
3	Snare Top	SM/Beta 57		
4	Snare Bottom	SM/Beta 57		
5	Hihat	AKG C451B		
6	Tom 1	SH E604		
7	Tom 2	SH E604		
8	Tom 3	SH E604		
9	Floor	SH E604		
10	OH L	AKG C451B		
11	OH R	AKG C451B		
12	Bass Post-DI (pre-amp out on amp)			
13	Bass Mic	Beta 52		
14	Git Mic amp 1	SH E906 / SM/Beta 57		
15	Git Mic amp 2	SH E906 / SM/Beta 57		
16	Git amp 1 (mono [pre-amp] XLR out)			
17	Git amp 2 (mono [pre-amp] XLR out)			
18	Vox LB Backing vocals	SM/Beta 58/57		
19	Vox C Lead vocals	SM/Beta 58/57		
20	DJ L (3,5 mic Jack out)			
21	DJ R (3,5 mic Jack out)			

Notes:

-Monitoring on page 3 (three) & 4 (four);

-Drummer uses a Sennheiser in-ear monitoring system on the E-Band (XLR, Power);

-Extra power point needed for a fan for the drummer

-2x2 meter Drum-riser

-Drummer brings his own Snare-, Bass- and Tom Microphones

-Organizer has to bring:

- 2 Overhead-mics (Rode NT-5 or similar incl. Stands)
 1 Hihat-mic (SM57 or similar incl. Stands)

-Extra power point needed for laptop for the audio recordings;

-Extra L&R input needed for audio recordings [XLR or Jack(2x mono)];

- -Four extra power points for the DJ
- -Two extra power points for the Lead Vocals

-Lead Vocalist uses a wireless system (SR 40 MINI PRO) along with a vocal effects processor (Digitech Vocalist Live FX)

Monitor 1 (Bass) [Left]: -Guitar -Lead Vocals (Center)

Monitor 2 (Lead Vocals) [Center]:

-Lead Vocals (Center) -Guitar -Kick

Monitor 3 (Guitar) [Right]:

-Guitar -Kick -Lead Vocals (Center)

Monitor 4 (DJ) [Left Back]:

-Kick -DJ -Guitar -Lead Vocals (Center) -Back Vocals (2)


Monitor 5 or in-ear (Drums):

-Kick -Snare -Toms -Cymbals -Guitar -Bass -DJ -Lead vocals

Side Fill 1 (Bass) [Left]: -Guitar

Side Fill 2 (Guitar) [Right]:

-Guitar

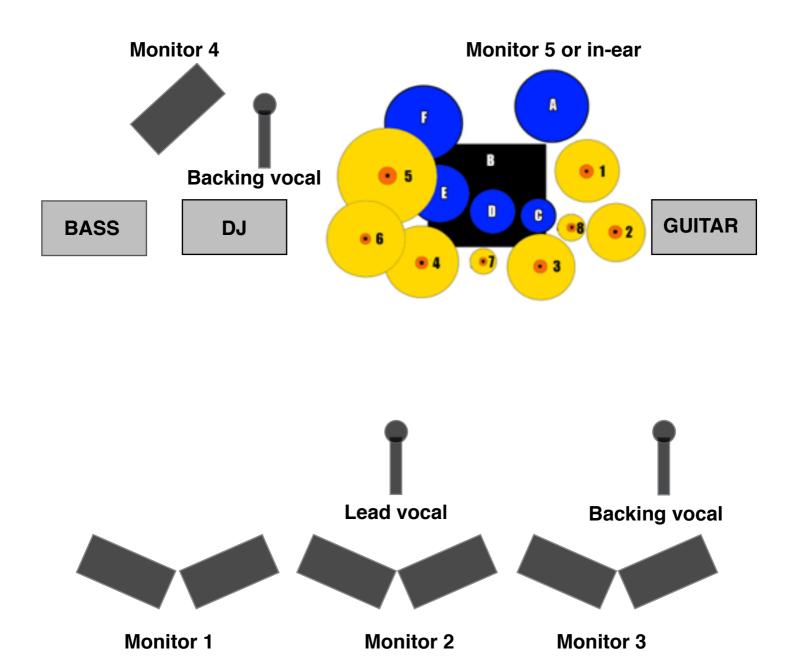

	4 4 11 0				
A :	14" Snare	1:	14" Hihat	Guitar	Fender Model 1000 pro Combo
В	22" Bass	2:	14" Crash		Laney V H 100 R top Laney 4x12 cabinet
C:	8" Tom	3:	16" Crash	Paga	
D:	10" Tom	4:	18" Crash	Bass	
E:	12" Tom	5:	20" Ride		- Two 3,5mm Jack
F:	14" Floor Tom	6:	18" China	DJ	
		7:	10" Splash	Lead Vocalist	- Wireless mic (SR 40 MINI PRO)
		8:	8" Splash		- Vocal effects processor (Digitech Vocalist Live FX)